

1159 kg max

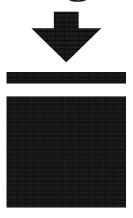

5 WALL HAZ MAT SET UP & CLOSURE INSTRUCTIONS

- 1. SQUARE UP BOX
- 2. NAIL BOTTOM FLAP A WITH 9 NAILS AS SHOWN IN DIAGRAM 1
- 3. FOLD IN BOTTOM FLAP B
- 4. FOLD IN FLAPS C & D AND POSITION BOX IN UPRIGHT POSITION
- **5. INSERT POLY LINER**
- 6. WHEN FULL, CINCH LINER & TWIST CLOCK-WISE ONE FULL REVOLUTION
- 7. SECURE LINER CLOSED WITH 2" WIDE 3M #375 PACKING TAPE (MIN. 12" LONG)
- 8. SEAL TOP OF BOX ALONG CENTER SEAM WITH 3 STRANDS OF 2" WIDE 3M #375 PACKING TAPE (MIN. OVERHANG OF 6" DOWN EACH SIDE OF BOX)

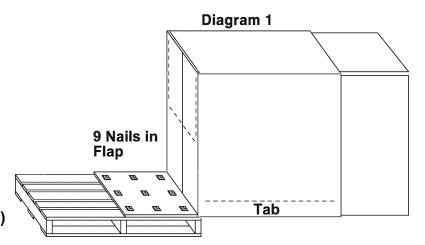

When using for lab pack waste, reference CFR 49 173.12, Maximum Gross Weight is 452 pounds (205 kg)

